


1. Roof Membrane


Position membrane over the roof edge and down outside face of wall, covering treated wood nailer(s) completely. Allow 1/2" (13 mm) excess membrane.

IMPORTANT! Outside edge of treated wood nailer(s) (minimum 2 x 4) shall be aligned flush with or extend slightly past outermost edge of wall.

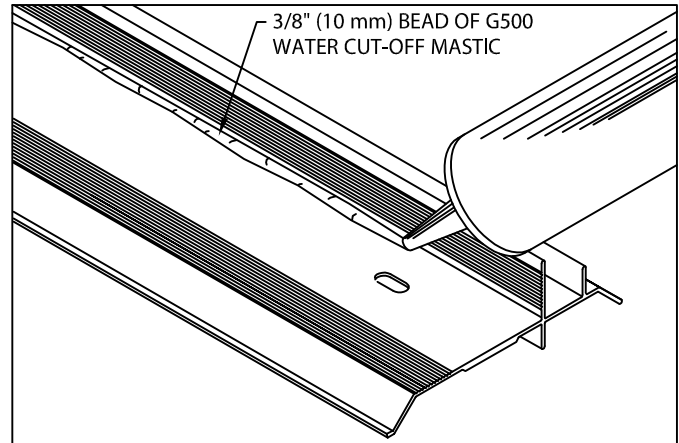

2. Miter & Scupper Anchor Bar (Preparation)


Lay miters and spillout scuppers on deck with outside face down. Be sure aluminum anchor bar is clean and free of dirt or dust. Apply a heavy 3/8" (10 mm) bead of G500 Water Cut-Off Mastic to the right angle intersection of the deck flange and back of anchor bar as shown. Application of sealant is required along the full length of each miter anchor bar.

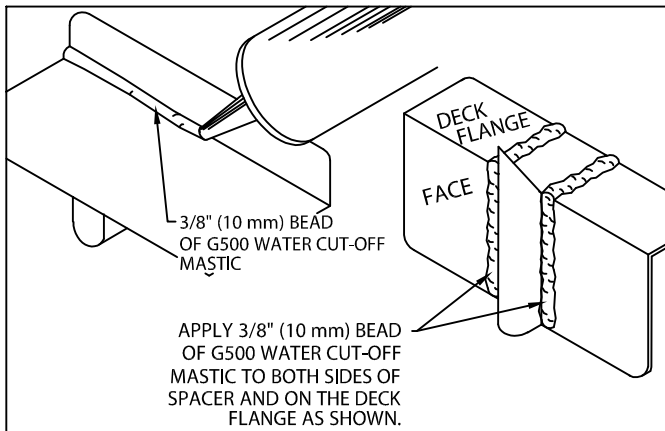

3. Anchor Bar Splice Plates

Apply Versico G500 Water Cut-Off Mastic to each splice as shown and described in STEP 2.

CAUTION! Installers shall wear protective eye wear to prevent injury. Do not over-drive fasteners, as stripping can occur at high driver torque. Recommended driving tool: 600 - 800 rpm electric drill equipped with depth-sensing nosepiece to prevent over-driving and stripout. Do not use impact type tool.

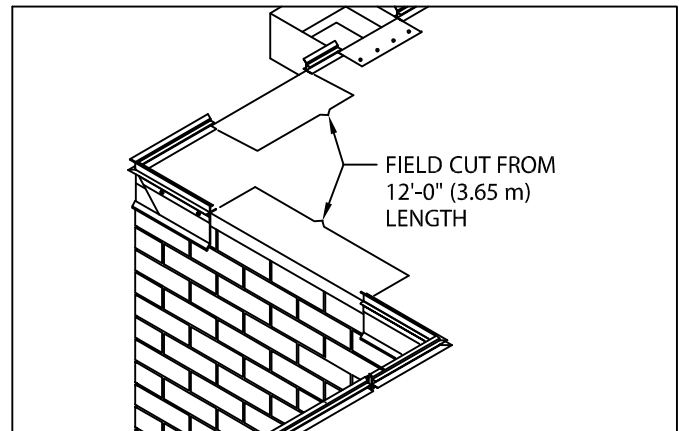

4. Miter Bar Installation


Fold roofing membrane at corners and install miters using 2" (51 mm) hex head stainless steel fasteners and driver bit furnished by Versico. Fasten anchor bar corners to nailer with one splice plate under each end of corner. The anchor bar splice plate must be snug to ends of anchor bar. Next locate and install spillouts and scuppers with G500 Water Cut-Off Mastic, 2" (51 mm) fasteners and anchor bar splice plates.



VERSITRIM 2000 STANDARD FASCIA


STONE BALLAST SINGLE-PLY VERSION

INSTALLATION INSTRUCTIONS

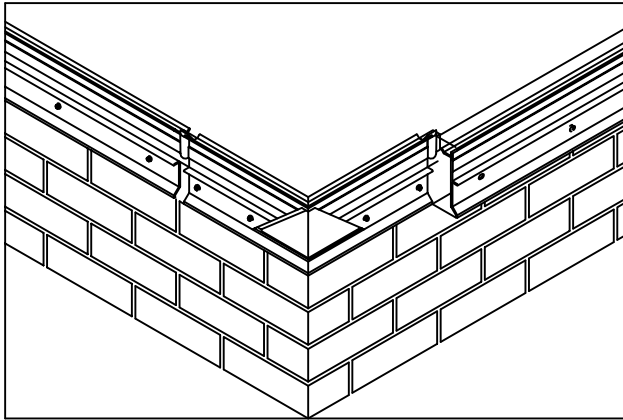


5. Anchor Bar (Installation)

Position 12'-0" (3.65 m) sections of anchor bar with G500 Water Cut-Off Mastic, as shown in steps 2 & 3, overlapping anchor bar splice plate. Allow 1/2" (13 mm) space between anchor bars. Install anchor bar splice plate at other end of bar. Fasten anchor bar 12" (305 mm) O.C. through slots using 2" (51 mm) stainless steel fasteners provided. Field cut sections as necessary.

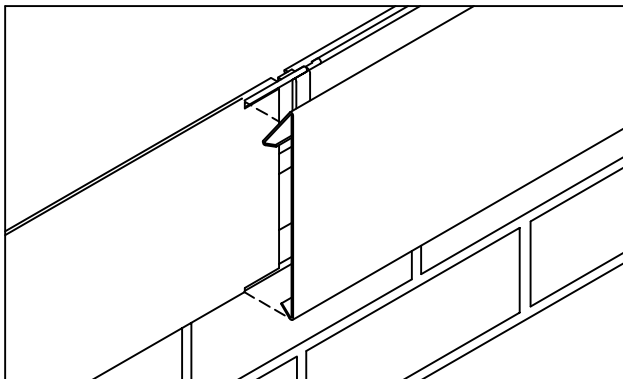

7. Fascia Covers


Position 12'-0" (3.65 m) fascia covers on top of anchor bar and overlap preceding cover approximately 1" (25 mm) at notches provided. Fascia covers shall be installed from right to left as seen from rooftop. With fascia cover in correct position atop anchor bar simply snap each section onto anchor bar by applying downward pressure with palm of the hand until the fascia cover is fully engaged along the entire length. Continue to install fascia covers, field cutting where necessary using fine tooth hacksaw.

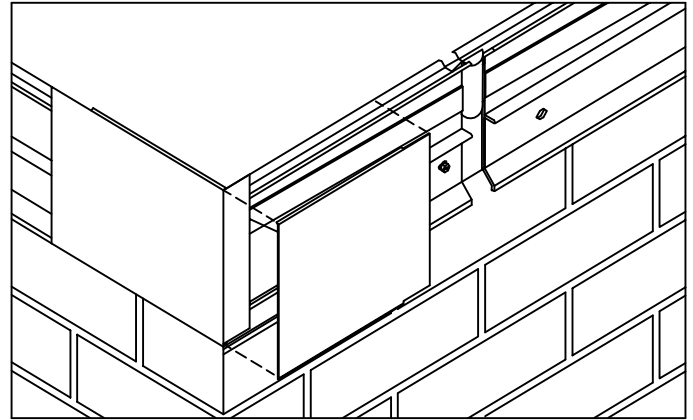

6. Fascia Miters Covers

Install 2-piece "snap-on" fascia miter covers first by snapping on fascia miter cover with 90° (degree) tab, followed by fascia miter cover without the tab. Simply position the cover atop bar and with palm of hand apply slight pressure downward until engaged to anchor bar.

IMPORTANT! Be sure to remove protective plastic film prior to installing each fascia section.

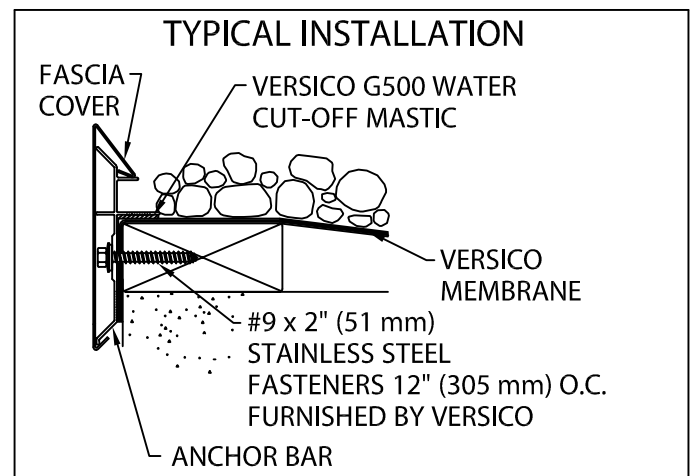

U.S. Patent # 4,665,667



Customer Service
800-558-2162

DATE: 11/13/08
DRN BY: JJC
CKD BY: SAK

SHT.# 2 OF 2

DWG# 18110-1310

D